




 **bonprix.** 964135

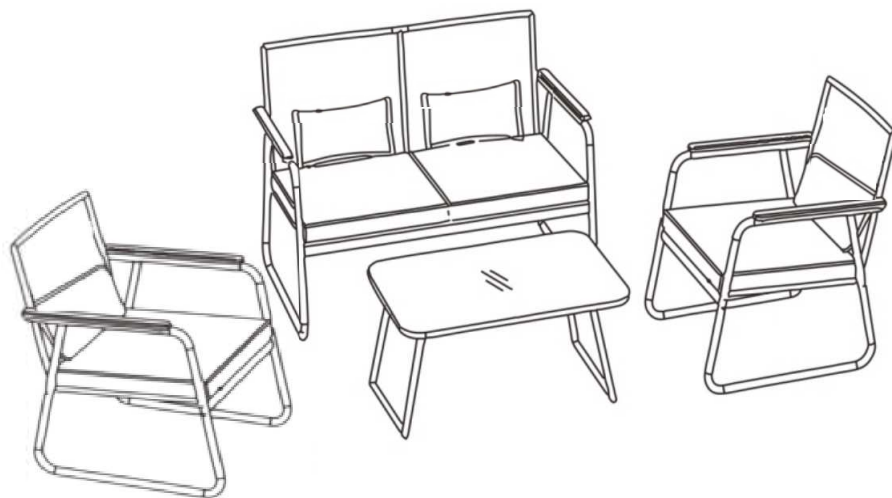

A×6	F×4
B×2	G×4
C×2	H×1
D×1	I×2
E×1	J×1



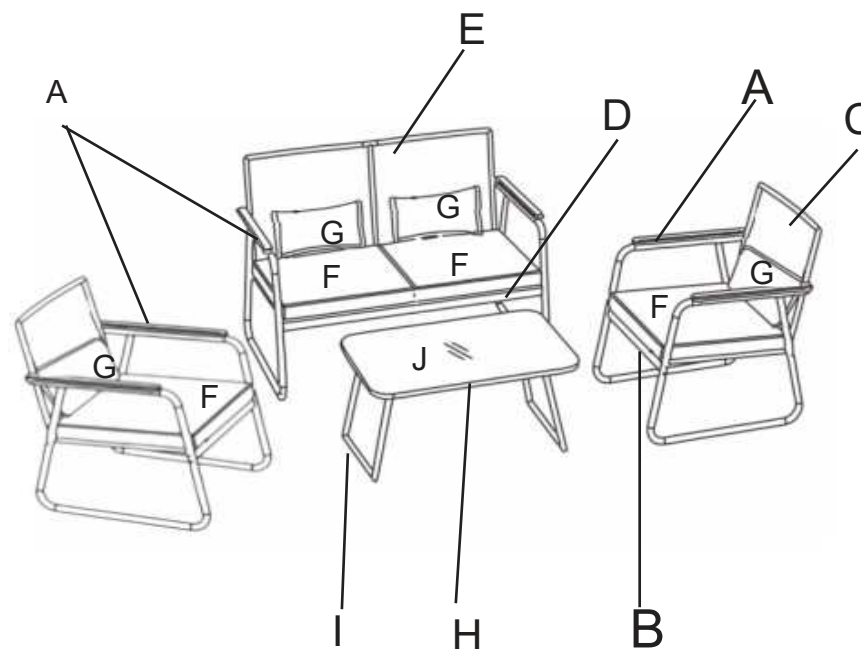

M6*35mm
K*32(+2)



M6*15mm
L*8(+1)



M*40(+2)



O*40(+2)



N*1



P*1

Bitte ziehen Sie die Schrauben während der Montage noch nicht fest. Die Schrauben erst in ihrer Position fixieren und am Ende der Montage alle Schrauben festziehen.


O*8

L*8

M*8

J*1

1

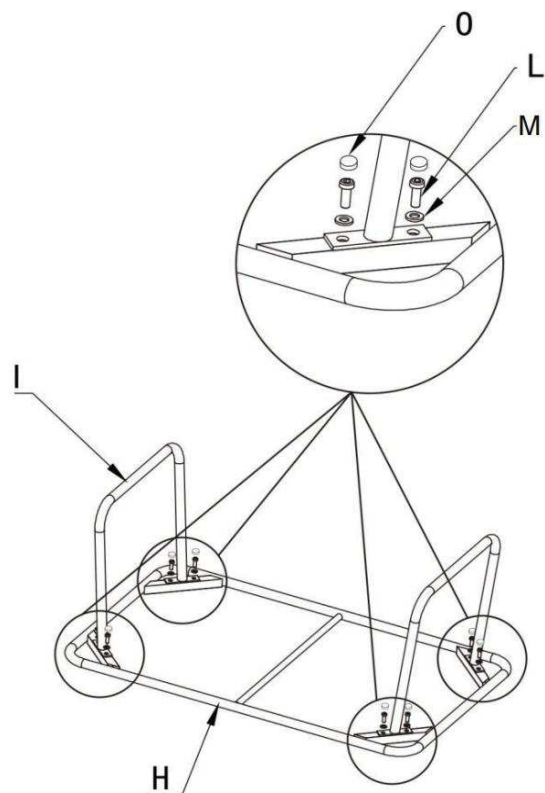

2



O*2

K*2


M*2

O*4


K*4

M*4

3

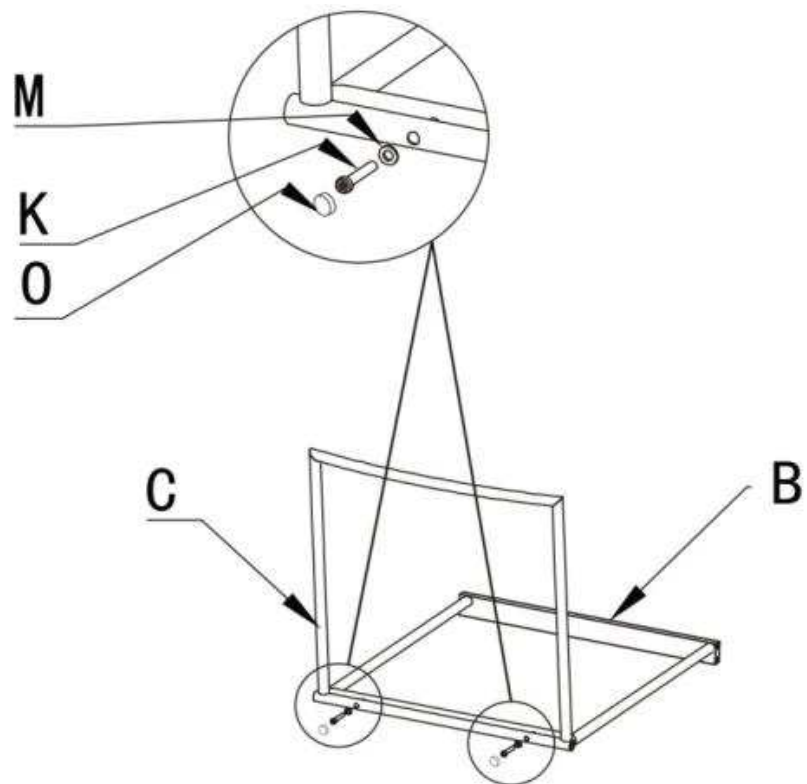

4

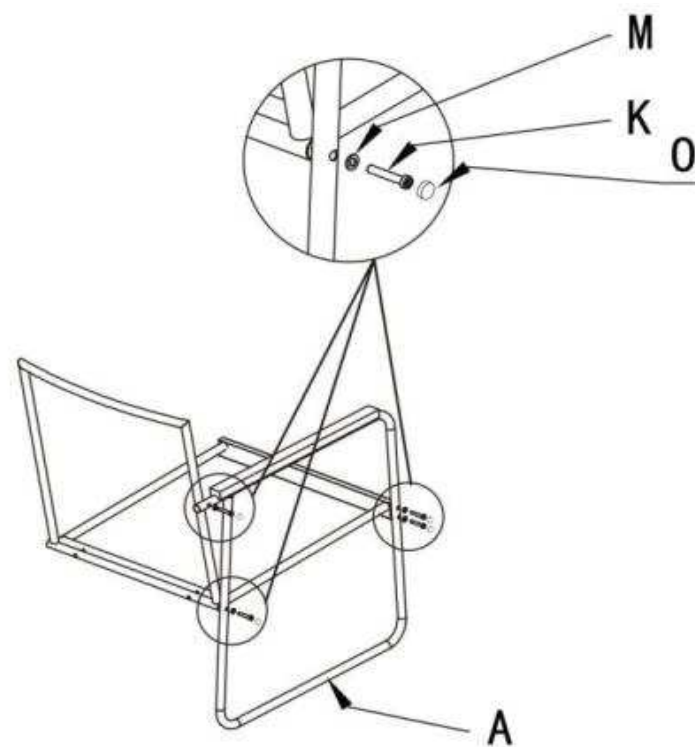

O*4

K*4


M*4

O*4


K*4

M*4

5

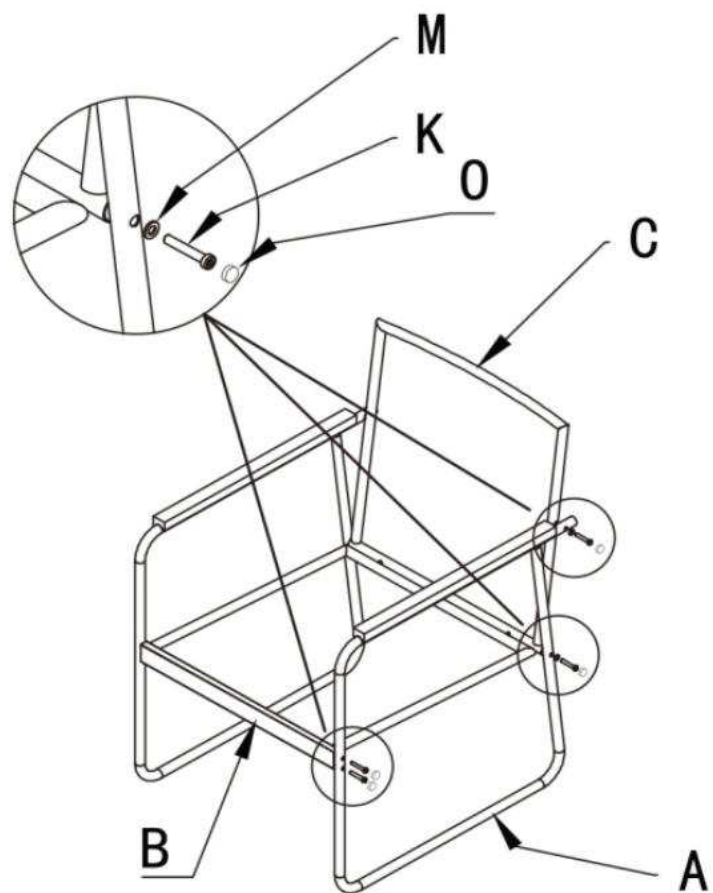

6

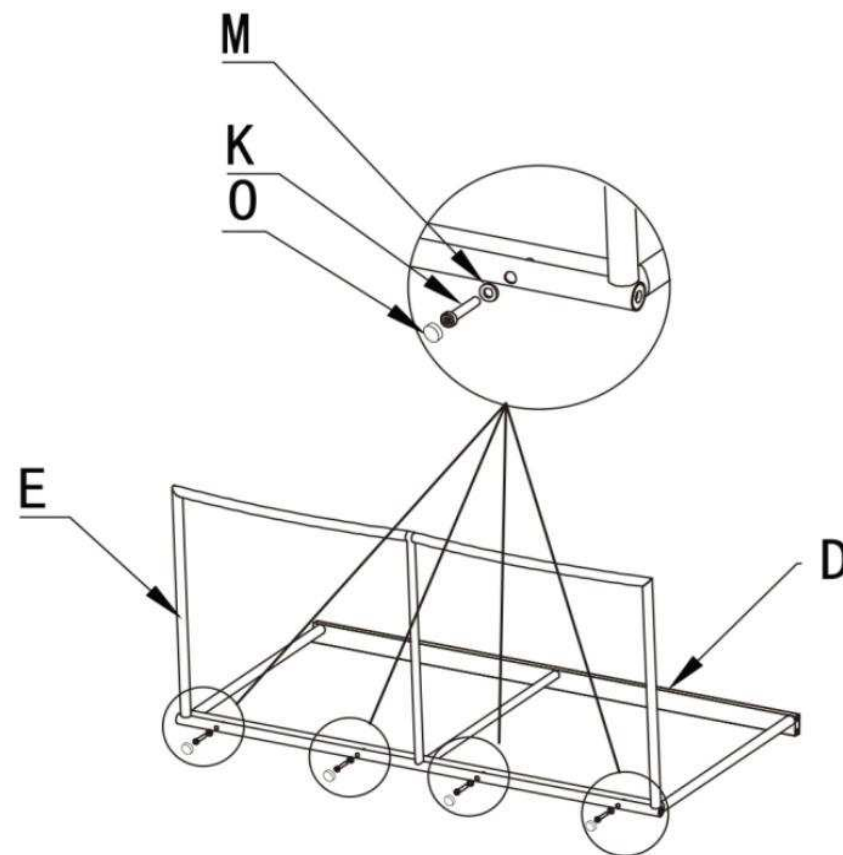

O*4

K*4


M*4

O*4


K*4

M*4

7

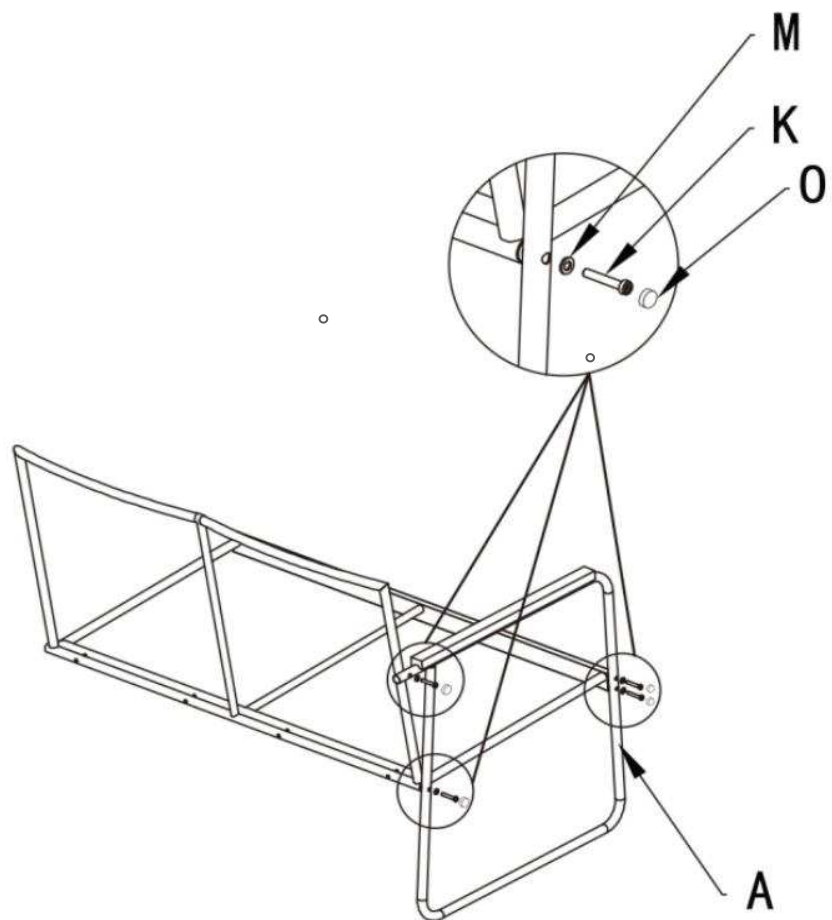


8

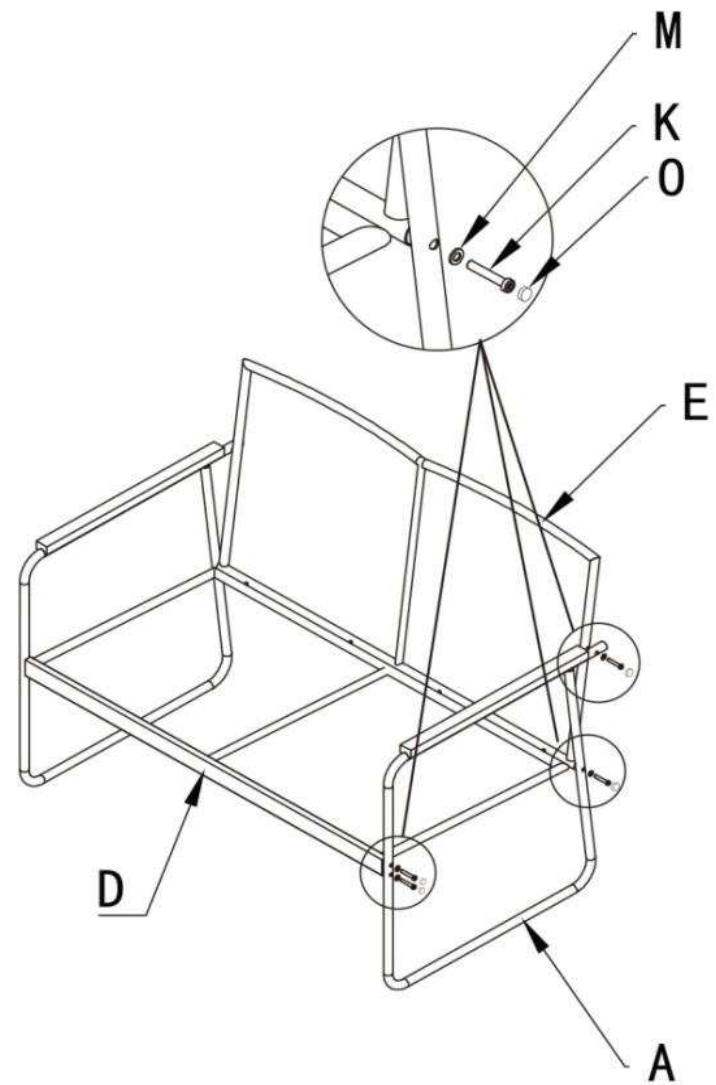

F*4

G*4

9

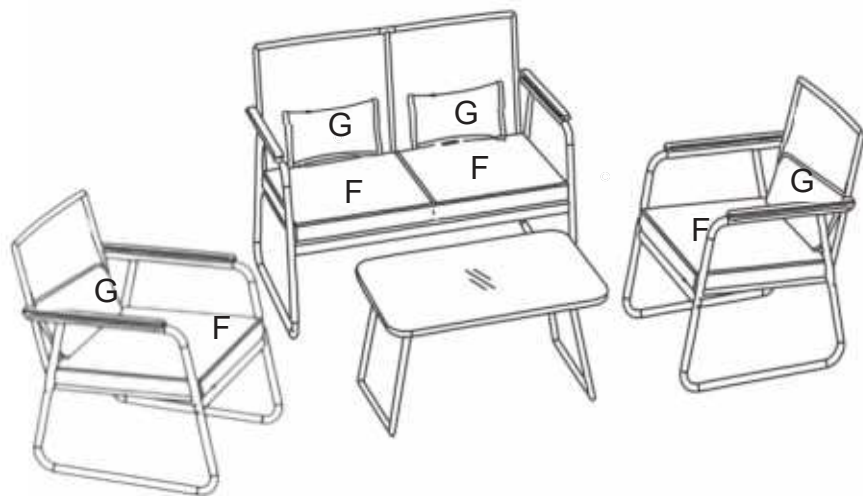

10

